P-308

SERIAL NO. 3231

ONKYO SERVICE MANUAL

Stereo Preamplifier

MODEL P-308

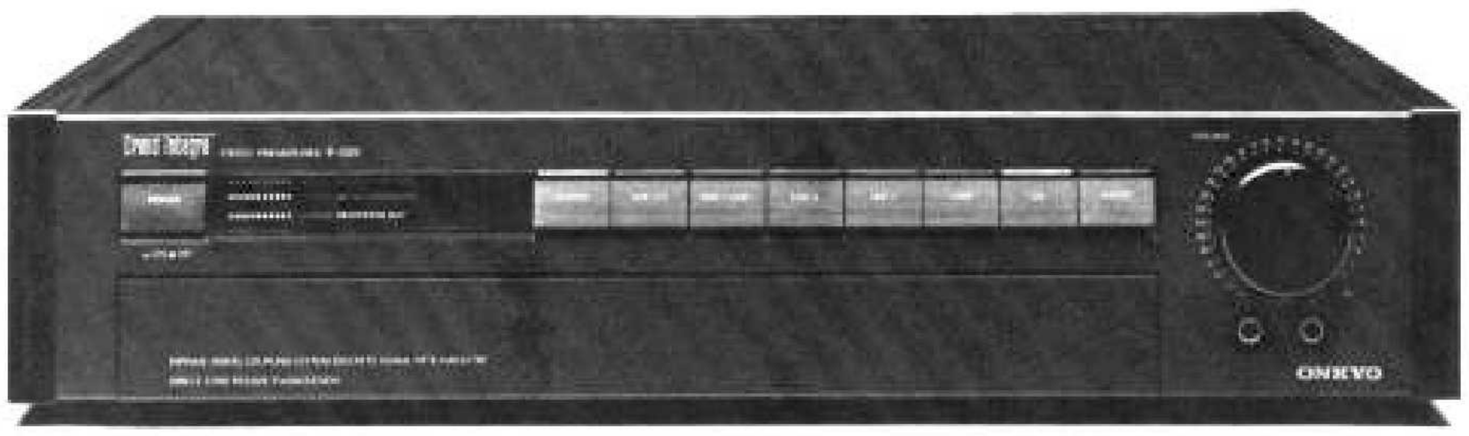

UD	120V AC, 60Hz
UG	220V AC, 50Hz
UQ	240V AC, 50Hz
UW	120V or 220V AC, 50/60Hz

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ⚠ ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PARTS NUMBERS APPEAR AS SHOWN IN THIS MANUAL.

MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

ONKYO®
AUDIO COMPONENTS

SPECIFICATIONS

Input Sensitivity and Impedance:	PHONO MC:	160μV/(100/220) ohms
	PHONO MM:	2.5m/(47 kohms/ 100 kohms)
	CD, TUNER, LINE, TAPE PLAY:	150mV/20 kohms
Rated Output and Impedance:	TAPE REC:	150mV/1.2 kohms (PHONO)
	OUTPUT:	1.0V/160 ohms Max. 6V
RIAA Deviation:	±0.2dB, 20–20,000Hz	
Frequency Response (CD, TUNER, LINE, TAPE):	+0, –3dB, 0.8Hz – 170kHz	
Phono Overload:	PHONO MM:	210mV RMS at 1kHz, THD 0.05%
	PHONO MC:	13mV RMS at 1kHz, THD 0.05%
Total Harmonic Distortion:	0.0008% at PHONO MM, 3V output 0.003% at PHONO MC, 3V output 0.0005% at CD, TUNER, LINE and TAPE, 3V output	
Intermodulation Distortion (CD):	0.003% (70Hz: 7kHz = 4:1)	
Signal-to-Noise Ratio:	PHONO MC:	81dB (IHF A-202)
	PHONO MM:	92dB (IHF A-202)
	CD:	101dB (IHF A-202)
Tone Control (Vol. –20dB):	BASS: ±10dB at 20Hz TURN OVER FREQUENCY BASS: 450 Hz CONTRABASS: 200Hz BOOST ONLY TREBLE: ±8dB at 20kHz	
Filters:	HIGH CUT: (TREBLE min.): 6dB/oct, 7kHz	
Inputs:	PHONO, CD, TUNER, LINE 1 & 2, TAPE PLAY 1, 2 & 3,	
Outputs:	TAPE REC OUT 1, 2 & 3 OUTPUT: 1 (fixed) 2 (variable)	
Power Supply:	Canadian models: AC 120V, 60Hz European models: AC 220V, 50Hz British and Australian models: AC 240V, 50Hz Worldwide models: AC 120V, 60Hz/ AC 220V, 50Hz	
Dimensions:	465(W) x 103(H) x 403(D) mm 18 5/16" x 4 1/16" x 15 7/8"	
Weight:	8.5 kg, 18.7 lbs.	

Specifications and features are subject to change without notice.

PRECAUTIONS

1. **Replacing the fuses**
   For continued protection against risk fire, replace only with same type and same rating fuse.

CIRCUIT NO.	PARTS NO.	DESCRIPTION
F901	252045	1A (ST–6), Primary fuse (120V, 120V/220V model)
F902	252063	0.5A–SE–EAWK, Primary fuse (220V, 120V/220V, 240V model)

2. **Insulation resistance mesurement (Only U.S.A. model)**
   Connect the insulating-resistance tester between the plug of power supply cable and the terminal GND on the back panel. Specifications; More than 10 MΩ at 500V.

3. **Voltage selector (rear panel)**
   Worldwide models are equipped with a voltage selector to conform with local power supplies. Be sure to set this switch to match the voltage of the power supply in your area before turning the power switch on. Voltage is changed by sliding the groove in the switch with a screwdriver or similar instrument to the up or down position. Confirm that the switch has been moved all the way to the up or down before turning the power switch on. If there is no voltage selector switch on the unit you have purchased, it can only be used in areas where the power supply voltage is the same as that of the unit.

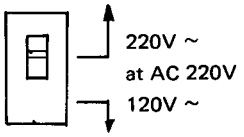

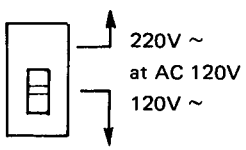

BLOCK DIAGRAM

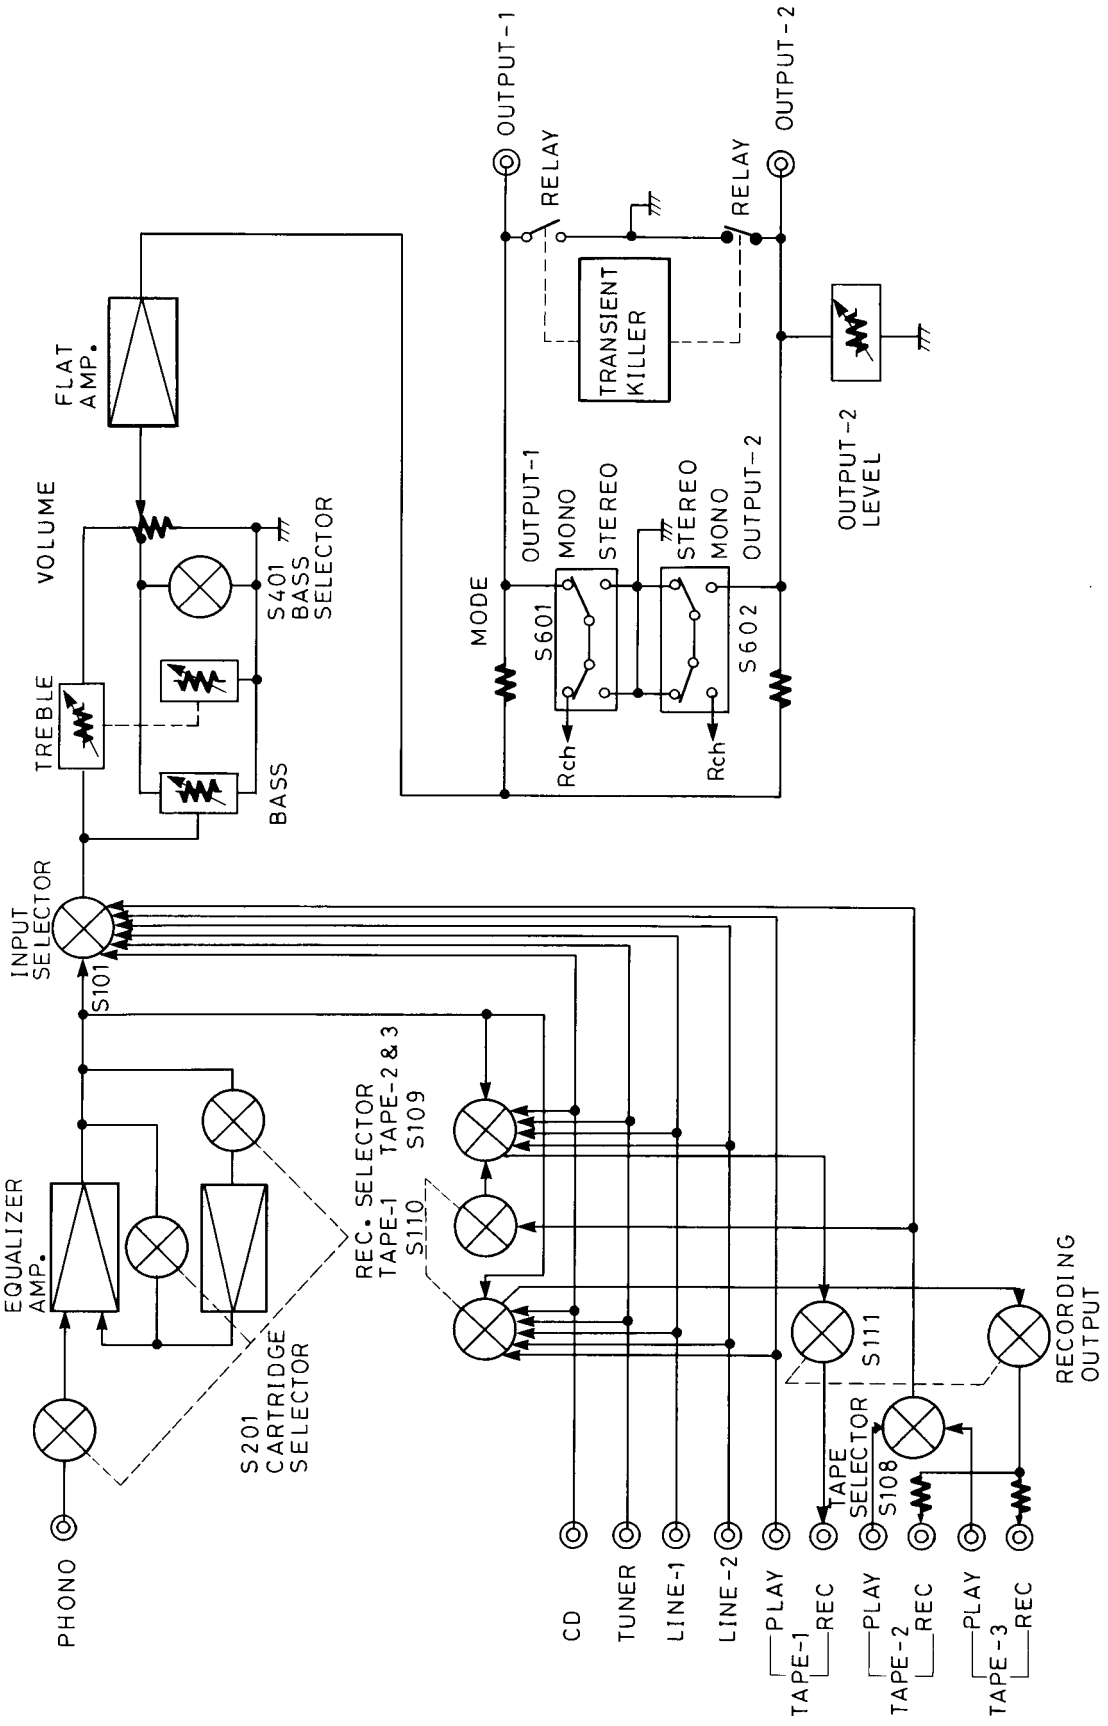

CHASSIS-EXPLODED VIEW

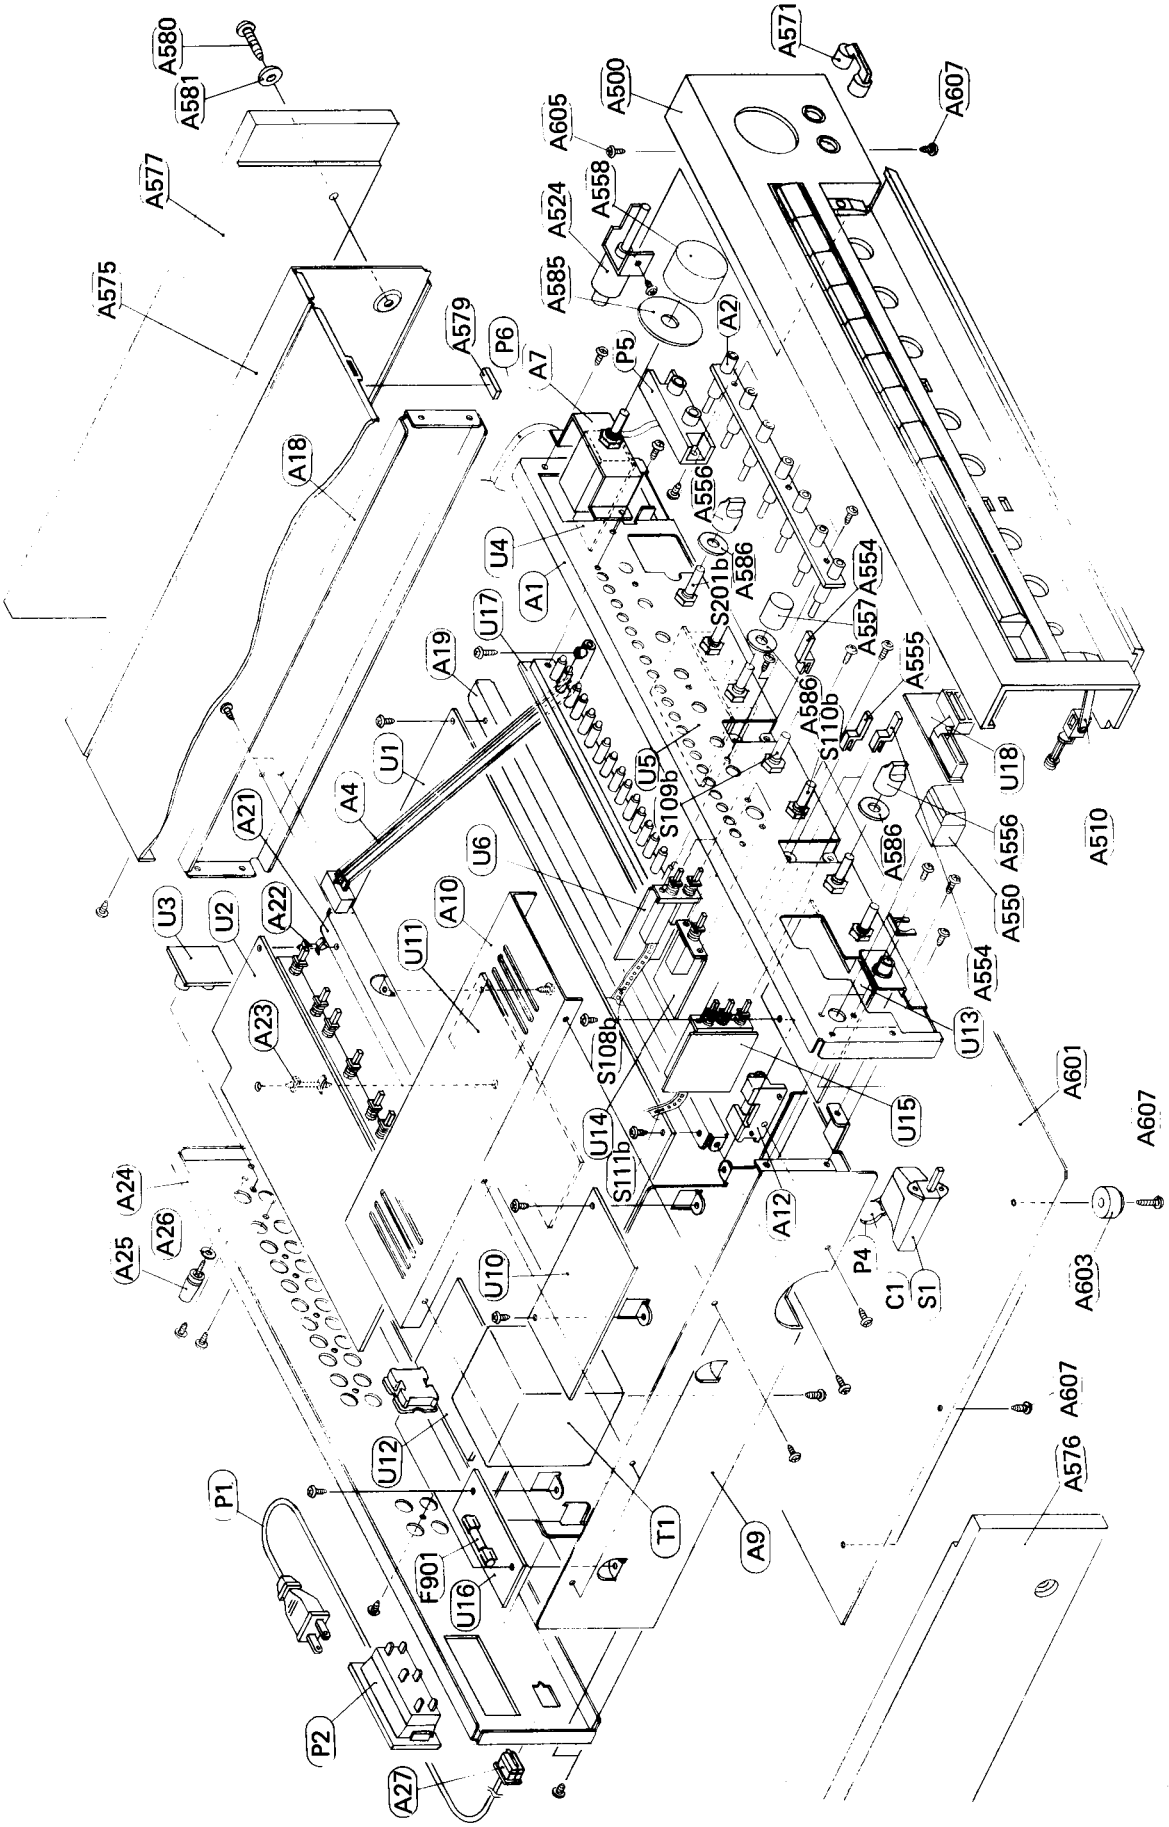

CHASSIS-EXPLODED VIEW-PARTS LIST

REF NO.	PARTS NO.	DESCRIPTION
A1	27110283	Front panel ass'y
A2	27267469A	Guide ass'y (Joint)
A4	27273051A	Joint (M)
A7	27141062	Bracket (VOL)
A9	27115201A	Side bracket (L)
A10	27150213	Shield plate
A12	27300817	Damper ass'y
A18	27115203A	Side bracket (R)
A19	27130423	Bracket (FR)
A21	27130425	Bracket (RE)
A22	27190480	Holder
A23	27190470	Holder
A24	27120844	Back panel
	27120845	Back panel [G]
	27120860	Back panel [W]
	27120861	Back panel [X]
	27120862	Back panel [Q]
A25	25060041	Ground terminal
A26	87644010	W4 × 10F(BC), Washer
A27	27300750	Bushing (AC cable)
A500	17828121	Front panel ass'y use this one
	17829121	Front panel ass'y [N][X]
A510	27273055A	Joint ass'y (Damper)
(A511)	27141072	Bracket (Damper)
(A512)	27300825	Joint (Damper)
(A513)	27260217A	Damper pin
(A514)	8930201S	ES-2S, Circlip
A524	27230019	Push latch ass'y
A550	28322522A	Knob ass'y (POW)
A554	28322525	Knob (PUSH)
A555	28322526	Knob (PUSH)
A556	28322527	Knob (HANE)
A557	28322528A	Knob (TONE)
A558	28322529A	Knob (VOL)
A571	28330071	Cap
A575	28184318A	Top cover
A576	28185255	Side board (L)
A577	28185256	Side board (R)
A579	28140020	4 × 10 × 40mm, Cushion
A580	836440303	4STV + 30CQ(BC), Screw
A581	870086	4 × 12BC(BC), Special washer
A585	28140126	ϕ53, Cushion
A586	28140219	ϕ20, Cushion
A601	27170227	Bottom board
A603	27175009A	Bottom leg
A605	838430068	3TTB+6B(BC), Tapping screw
A607	831430088	3TTW + 8B(BC), Tapping screw

REF.NO.	PARTS NO.	DESCRIPTION
⚠ T1	2300104	NPT-919D, Power transformer
	2300105	NPT-919G, Power transformer [G]
	2300106	NPT-919DG, Power transformer [W][X]
	2300107	NPT-919Q, Power transformer [Q]
⚠ C1	3500065A	0.01μF, AC400V, Capacitor
⚠ S1	25035345A	NPS-111-L308P, Power switch
	25035398	NPS-111-362P, Power switch [G][W][Q]
⚠ S2	25065123	NSS-1258P, Slide switch [W]
S108b	25065292	Remote switch, wire section
S109b	25030279	NRSM-106-15BU, Remote switch
S110b	25030280	NRSM-106-15BU, Remote switch
S111b	25065284-1	Remote switch, wire section
S201b	25030281A	NRSM-104-15BU, Remote switch
⚠ P1	253122	AS-UC-6#16, Power supply cable
	253129A	AS-CEE, Power supply cable [G][W]
	253118	AS-SAA, Power supply cable [Q]
⚠ P2	25050293	NSCT-6P120, AC outlet [D][X]
P3	25108010	LG-2C, Lug terminal [G][W][Q]
P4	27300601	SB-1925, Cover (Capacitor)
P5	25045200	NPJ-2PBL81, Terminal
P6	2000565	NSAS-3P-521, Socket ass'y
P7	28330072	Cap (AC outlet) [X]
⚠ F901	252045	1A ST-6, Primary fuse [D][N][X][W]
⚠ F902	252063	0.5A-SE-EAWK, Primary fuse [G][Q][X][W]

REF.NO.	PARTS NO.	DESCRIPTION
U1	17828545-1	NAEF-2645-1, Equalizer amplifier pc board ass'y
U2	17828546-1	NASW-2646-1, Input selector switch pc board ass'y
U3	17828547-1	NAPJ-2647-1, Phono input terminal pc board ass'y
U4	17828548-1	NAVR-2648-1, Volume controle pc board ass'y
U5	17828549-1	NATC-2649-1, Tone control circuit pc board ass'y
U6	17828550-1	NASW-2650-1, Bass selector switch pc board ass'y
U10	17828554-1	NAPS-2654-1, Power supply pc board ass'y
U11	17828555-1	NASW-2655-1, REC.Selector switch pc board ass'y
U12	17828556-1	NATK-2656-1, Transient killer circuit pc board ass'y
U13	17828557-1	NAPH-2657-1, Phone amplifier circuit pc board ass'y
U14	17828558-1	NASW-2658-1, Output switch pc board ass'y
U15	17828559-1	NASW-2659-1, Recording output switch pc board ass'y
U16	17828560-1	NAFU-2660-1, Fuse pc board ass'y
	17824560-1A	NAFU-2660-1A, Fuse pc board ass'y[G][Q]
	17820560-1B	NAFU-2660-1B, Fuse pc board ass'y [W]
U17	17828561-1	NADIS-2661-1, Input display pc board ass'y
U18	17828562-1	NADIS-2662-1, Display pc board ass'y
U19	17824563-1A	NASW-2663-1A, Switch pc board ass'y [G][W][Q]

NOTE
[D]: Only 120V models
[G]: Only 220V models
[W]: Only 120V/220V models
[N]: Only U.S.A. models
[X]: Only Military market models
[Q]: Only British and Australian models

NOTE: THE COMPONENTS IDENTIFIED BY MARK ⚠ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PARTS NUMBER SPECIFIED.

PRINTED CIRCUIT BOARD PARTS LIST

EQUALIZER AMPLIFIER PC BOARD (NAEF-2645-1)

CIRCUIT NO.	PARTS NO.	DESCRIPTION
	Transistors	
Q201~Q204	2211535 or	2SK146(GR) or
	2211536	2SK146(BL)
Q205~Q208	2211895 or	2SC1815L(GR) or
	2211896	2SC1815L(BL)
Q209,Q210	2211414	2SC1627(Y)
Q211,Q212	2211515 or	2SA995(F) or
	2211516	2SA995(G)
Q213~Q218	2211975	2SA1015L(GR)
Q219,Q220	2211895 or	2SC1815L(GR) or
	2211896	2SC1815L(BL)
Q221,Q222	2211414	2SC1627(Y)
Q223,Q224	2211424	2SA817(Y)
Q225,Q226	2211414	2SC1627(Y)
Q227,Q228	2211424	2SA817(Y)
Q501,Q502	2212805 or	2SK389(GR) or
	2212806	2SK389(BL)
Q503~Q508	2211255	2SC1815(GR)
Q509,Q510	2211515 or	2SA995(F) or
	2211516	2SA995(G)
Q511~Q514	2211455	2SA1015(GR)
Q515,Q516	2211255	2SC1815(GR)
Q517,Q518	2211164	2SC2120(Y)
Q519,Q520	2211504	2SA950(Y)
Q521,Q522	2211164	2SC2120(Y)
Q523,Q524	2211504	2SA950(Y)
Q931	2201404 or	2SD1406(Y) or
	2201403	2SD1406(O)
Q932	2201394 or	2SB1015(Y) or
	2201393	2SB1015(O)
Q933	2211254 or	2SC1815(Y) or
	2211255	2SC1815(GR)
Q934	2211454 or	2SA1015(Y) or
	2211455	2SA1015(GR)
Q935	2211254 or	2SC1815(Y) or
	2211255	2SC1815(GR)
Q936	2211454 or	2SA1015(Y) or
	2211455	2SA1015(GR)
Q951	2201404 or	2SD1406(Y) or
	2201403	2SD1406(O)
Q952	2201394 or	2SB1015(Y) or
	2201393	2SB1015(O)
Q953	2211254 or	2SC1815(Y) or
	2211255	2SC1815(GR)
Q954	2211454 or	2SA1015(Y) or
	2211455	2SA1015(GR)
Q955	2211254 or	2SC1815(Y) or
	2211255	2SC1815(GR)
Q956	2211454 or	2SA1015(Y) or
	2211455	2SA1015(GR)
	ICs	
Q301,Q302	222585	NJM4558DXB
Q551,Q552	222465	NJM4558D
	Diodes	
D201~ D204	223145	1S2076TD
D205~ D210	225218	LTZ-MR15
D501~ D504	223145	1S2076TD
D505~ D510	225218	LTZ-MR15
D931,D932,D951	2239511 or	RD6.8E-B1 or
D952	2243171	MTZ6.8-A
	Capacitors	
C209,C210	372121814	180pF, 50V, Styrene

CIRCUIT NO.	PART NO.	DESCRIPTION
C211,C212	372122214	220pF, 50V, Styrene
C213~ C216	379121535	0.015 μF, 50V, Film (DEW)
C217,C218	379125625	5600pF, 50V, Film (DEW)
C219,C220	372122214	220pF, 50V, Styrene
C221,C222	379127524	7500pF, 50V, Film (DEW)
C223~ C226	379121034	0.01μF, 50V, Film (DEW)
C227,C228	379124334	0.043 μF,50V, Film (DEW)
C229,C230	379123634	0.036 μF, 50V, Film (DEW)
C231,C232	372126804	68pF, 50V, Styrene
C237,C238	391232219	220 μF, 10V, Elect. (MUSE)
C239,C240	379122725	2700pF, 50V, Film (DEW)
C241~ C244	354751019	100 μF, 25V, Elect.
C245,C246	354784709	47μF, 50V, Elect.
C301,C302	354741009	10μF, 16V, Elect.
C303~ C306	391252219	220 μF, 25V, Elect. (MUSE)
C307,C308	372123304	33pF,50V, Styrene
C501,C502	372121014	100pF, 50V, Styrene
C503,C504	372122214	220pF, 50V, Styrene
C505,C506	354784799	0.47μF,50V, Elect.
C507,C508	372122704	27pF, 50V, Styrene
C515,C516	391232219	220 μF, 10V, Elect. (MUSE)
C517~ C520	354751019	100 μF, 25V, Elect.
C521,C522	354784709	47μF, 50V, Elect.
C551~ C554	354752209	22μF,25V, Elect.
C555,C556	372123304	33pF, 50V, Styrene
C931,C932	354782219	220 μF, 50V, Elect.
C935,C936	354721019	100 μF, 6.3V, Elect.
C937,C938	354753319	330 μF, 25V, Elect.
C951,C952	354762219	220 μF, 35V, Elect.
C955,C956	354721019	100 μF, 6.3V, Elect.
C957,C958	354743319	330 μF, 16V, Elect.
	Resistors	
R225~ R228	442526804	68Ω, 1/2W, Metal oxide film
R239,R240	442528204	82Ω, 1/2W, Metal oxide film
R265,R266	442524314	430 Ω, 1/2W, Metal oxide film
R267~ R274	442523304	33Ω, 1/2W, Metal oxide film
R275,R276	441625614	560 Ω, 1W, Metal oxide film
R529~ R536	442522404	24Ω, 1/2W, Metal oxide film
R539~ R542	441622014	200 Ω, 1W, Metal oxide film
	Switch	
S201a	25065283	NSS-84111, Remote switch
	Sockets	
JC101	25050272	NSCT-8P100
P203	2000556	NSAS-6P512, Socket ass'y
P501	2000557	NSAS-6P513 Socket ass'y
P502,P503	2000558	NSAS-6P514 Socket ass'y
	Plugs	
P201a,P202a	25055132	NPLG-2P116
P504a ~ P508a	25055133	NPLG-3P117
	Radiator	
P931,P932	27160176	RAD-56
P951,P952	27160145	RAD-51
	Plate	
	25060032B	Bus
	Slield case	
	27225075	

INPUT SELECTOR SWITCH PC BOARD (NASW-2646-1)

CIRCUIT NO.	PARTS NO.	DESCRIPTION
	Coils	
L101~ L104	231069	NCH-1119
	Switches	
S101~ S107	25035524	NPS-742-L486
S108a	25065190	NSS-4285, Remote switch
	Terminals	
P102	25045190	NPJ-2PDBL74
P103~ P105	25045199	NPJ-6PDBL80
P106,P107	25045201	NPJ-4PDBL82
P108,P109	25045202	NPJ-4PDBL83
P110,P111	25045202	NPJ-4PDBL83
	Sockets	
JC151,JC154	25050273	NSCT-9P101
(P203,P501)	2000556	NSAS-6P512, Socket ass'y
	Plug	
P006a	25055133	NPLG-3P117

PHONO INPUT TERMINAL PC BOARD (NAPJ-2647-1)

CIRCUIT NO.	PARTS NO.	DESCRIPTION
P101	25045197	NPJ-2PDBL78, Terminal
P201	2000554	NSAS-4P510, Socket ass'y
P202	2000555	NSAS-4P511, Socket ass'y

VOLUME CONTROLE PC BOARD (NAVR-2648-1)

CIRCUIT NO.	PARTS NO.	DESCRIPTION
R403	5104185	N27DGL25KT20M, Variable resistor
(P502,P503)	2000558	NSAS-6P514, Socket ass'y

TONE CONTROL CIRCUIT PC BOARD (NATC-2649-1)

CIRCUIT NO.	PARTS NO.	DESCRIPTION
	Capacitors	
C401,C402	379121834	0.018 μF, 50V, Film (DEW)
C403,C404	379123924	3900pF, 50V, Film (DEW)
C405,C406	379123334	0.033 μF, 50V, Film (DEW)
C407,C408	379121644	0.16μF, 50V, Film (DEW)
C409,C410	379121844	0.18μF, 50V, Film (DEW)
	Resistors	
R415	5104186	N27DQL11C55K15M, Variable
R417	5104187	N27DQL11C35K44K15M, Variable

BASS SELECTOR SWITCH PC BOARD (NASW-2650-1)

CIRCUIT NO.	PARTS NO.	DESCRIPTION
S401	25035525	NPS-100-122-L487, Bass shift switch
(S108c)	25035525	NPS-100-122-L487, Remote switch, Operation section

POWER SUPPLY PC BOARD (NAPS-2654-1)

CIRCUIT NO.	PARTS NO.	DESCRIPTION
	Diodes	
D901,D902	223867	WL02
D903,D904	223890	W01RL
D905~D910	223896	1N4003F
	Capacitors	
C901,C902	375104745	0.47μF, 125V, Film (ME)
C903~C906	375101045	0.1 μF, 125V, Film (ME)
C907,C908	354782229	2200μF, 50V, Elect.
C909,C910	354762229	2200μF, 35V, Elect.
C911,C912	354741029	1000μF, 16V, Elect.
C913	354753319	330 μF, 25V, Elect.
C914	379121035	0.01μF, 50V, Film (DEW)
	Resistors	
R901,R902	442523304	33Ω, 1/2W, Metal oxide film
R903~R906	442520104	1 Ω, 1/2W, Metal oxide film
R907,R908	442520204	2 Ω, 1/2W, Metal oxide film
R909,R910	442526214	620 Ω, 1/2W, Metal oxide film
	Socket	
JC951	25050267	NSCT-3P95

REC. SELECTOR SWITCH PC BOARD (NASW-2655-1)

CIRCUIT NO.	PARTS NO.	DESCRIPTION
	Coils	
L105,L106	231069	NCH-1119
	Switches	
S109a,S110a	25065079	NSS-4643, Remote switch
S111a	25065190	NSS-4285, Remote switch
	Socket	
P155	25050267	NSCT-3P95

TRANSIENT KILLER CIRCUIT PC BOARD (NATK-2656-1)

CIRCUIT NO.	PARTS NO.	DESCRIPTION
	Transistors	
Q801	2211255	2SC1815(GR)
Q802	2211455	2SA1015(GR)
Q803	2211164	2SC2120(Y)
	Diodes	
D801	223145	1S2076TD
D802,D803	2239492 or 2243162	RD6.2E-B2 or MTZ6.2-B
D804,D805	223145	1S2076TD
	Coils	
L601~L604	231069	NCH-1119
	Capacitors	
C801	354744709	47μF, 16V, Elect.

CIRCUIT NO.	PART NO.	DESCRIPTION
C802	354751009	10μF, 25V, Elect.
	Resistors	
R801	442521324	1.3kΩ, 1/2W, Metal oxide film
R807	442526214	620 Ω, 1/2W, Metal oxide film
	Sockets	
JC801	25050270	NSCT-6P98
P506,P507	2000562	NSAS-6P518, Socket ass'y
	Relaies	
RL801,RL802	25065282	NRL-2P1.25A-DC12-39
	Terminal	
P601,P602	25045201	NPJ-4PDBL82

HEADPHONE AMPLIFIER CIRCUIT PC BOARD (NAPH-2657-1)

CIRCUIT NO.	PARTS NO.	DESCRIPTION
	ICs	
Q701	222957	M-5216L
	Diodes	
D701~D704	223145	1S2076TD
	Capacitors	
C701,C702	354760479	4.7 μF, 35V, Elect.
C703,C704	372122214	220 pF, 50V, Styren
C705,C706	354744709	47μF, 16V, Elect.
C707,C708	379121035	0.01μF, 50V, Film (DEW)
C709,C710	354741009	10μ, 16V, Elect.
C711	354760479	4.7 μF, 35V, Elect.
	Resistors	
R711,R712	441624704	47Ω, 1W, Metal oxide film
	Switches	
S603,S604	25030278	NRSM-116-15SBU
	Stereo jack	
P701	25045203	HLJ-4318-01-3010
	Sockets	
JC751	25050272	NSCT-8P101
P504,P505	2000560	NSAS-6P516, Socket ass'y
P508	2000564	NSAS-6P520, Socket ass'y

OUTPUT SWITCH PC BOARD (NASW-2658-1)

CIRCUIT NO.	PARTS NO.	DESCRIPTION
S801	25035372	NPS-122-L336, Output ON/OFF switch

RECORDING OUTPUT SWITCH PC BOARD (NASW-2659-1)

CIRCUIT NO.	PARTS NO.	DESCRIPTION
	Diodes	
D855	225137CG or 225137DG or 225137DY	SEL2413CG or SEL2413DG or SEL2413DY
	Resistors	
R851~R853	442521324	1.3kΩ, 1/2W, Metal oxide film
	Switches	
S601,S602,(S111C)	25035526	NPS-222-122-L488

FUSE PC BOARD (NAFU-2660-1)

CIRCUIT NO.	PARTS NO.	DESCRIPTION
F901a	250113	S-N5051, Fuse holder

FUSE PC BOARD (NAFU-2660-1A)

CIRCUIT NO.	PARTS NO.	DESCRIPTION
F902a	25050065	YSH-403T Fuse holder

FUSE PC BOARD (NAFU-2660-1B)

CIRCUIT NO.	PARTS NO.	DESCRIPTION
F901a	250113	S-N5051, Fuse holder
F902a	25050065	YSH-403T Fuse holder

INPUT DISPLAY PC BOARD (NADIS-2661-1)

CIRCUIT NO.	PARTS NO.	DESCRIPTION
	Diodes	
D857~D872	225137CG or 225137DG or 225137DY	SEL2413CG or SEL2413DG or SEL2413DY
	Resistor	
R854	442521324	1.3kΩ, 1/2W, Metal oxide film
	Holder	
	27190456	Holder (LED)

DISPLAY PC BOARD (NADIS-2662-1)

CIRCUIT NO.	PARTS NO.	DESCRIPTION
	Diodes	
D851,D852	225142	SEL2413K
D853,D854	225142CG or 225142DG or 225142DY	SEL2913CG or SEL2913DG or SEL2913DY
D856	225142	SEL2413K
	Holder	
	27190455	Holder (LED)

SWITCH PC BOARD (NASW-2663-1A)

CIRCUIT NO.	PARTS NO.	DESCRIPTION
C981	3500065A	0.01μF, AC400V, Capacitor (IS)
P901	27300601	SB-1925, Cover (capacitor)
S901	25035398	NPS-111-362P, Power switch

SYSTEM CONNECTIONS

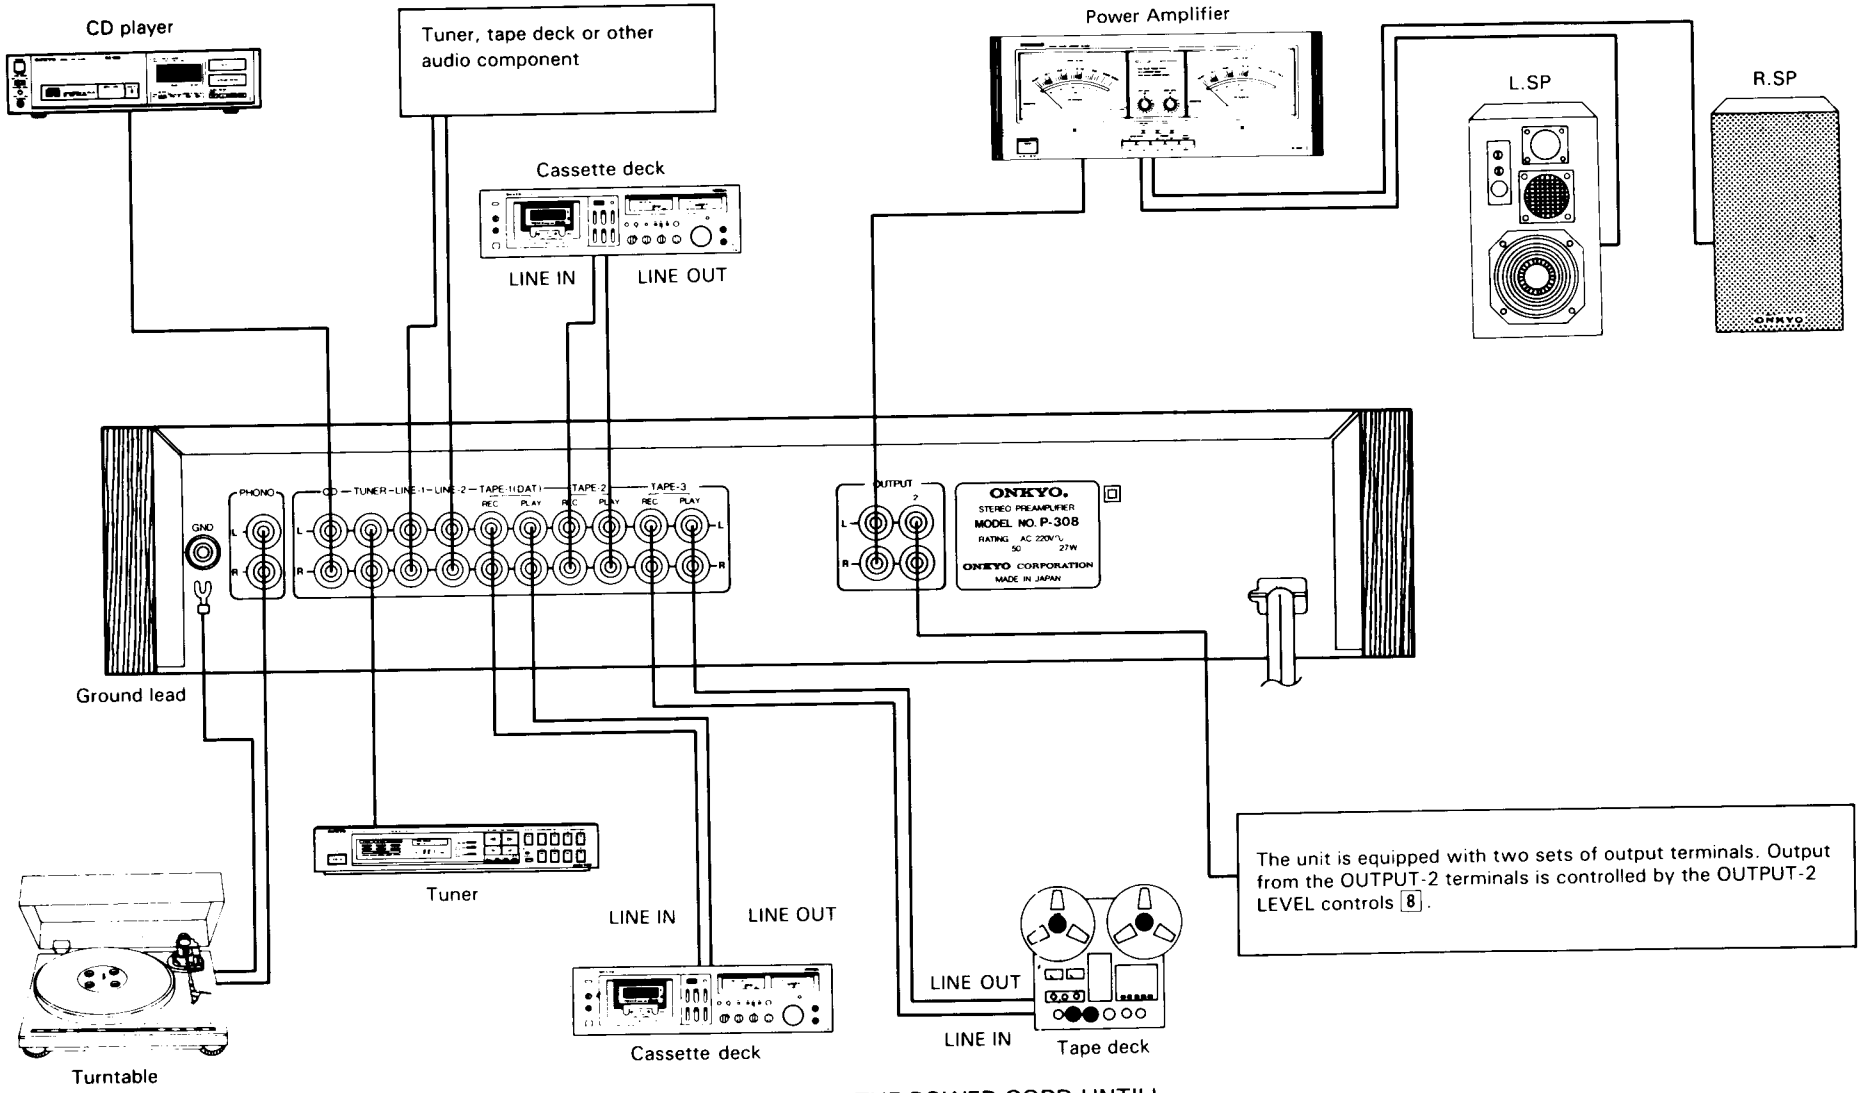

- DO NOT PLUG IN THE POWER CORD UNTILL ALL CONNECTIONS HAVE BEEN COMPLETED AND THOROUGHLY CHECKED.

SCHEMATIC DIAGRAM

(120V Model)

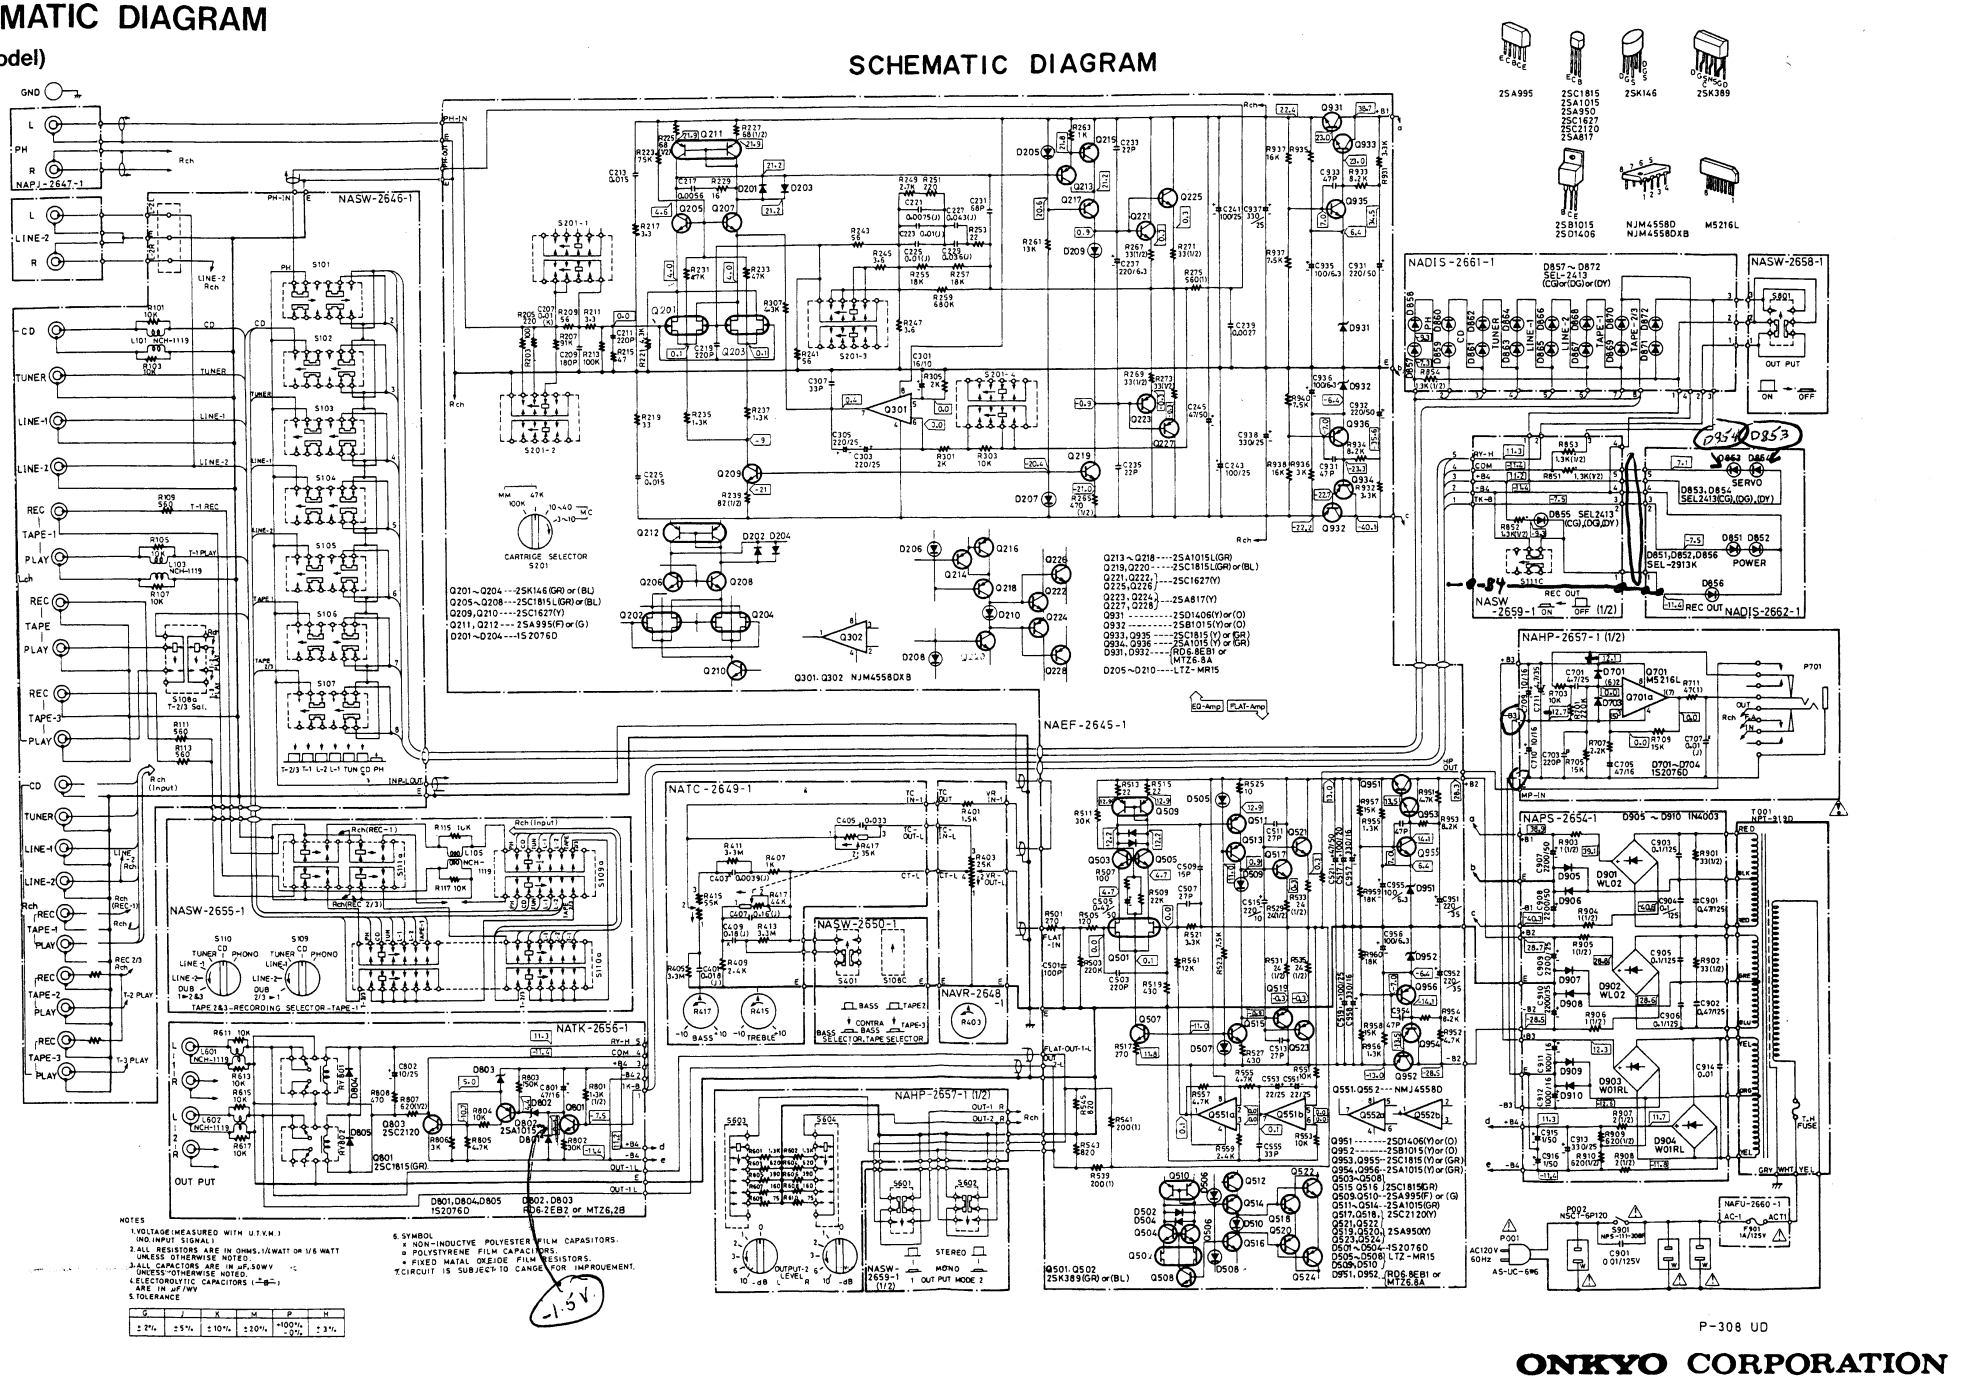

SCHEMATIC DIAGRAM

(120V/220V Model)